

- ASSEMBLY INSTRUCTIONS:
  1- INSERT WIRES THROUGH CONTACT RETAINER AND CRIMP TO CONTACTS.
- 2- AFTER CRIMPING SEAT CONTACTS INTO PLUG. 3- INSERT CONTACT RETAINER INTO PLUG.
- 4- INSTALL RETAINING RING INTO GROOVE IN BACK OF PLUG.

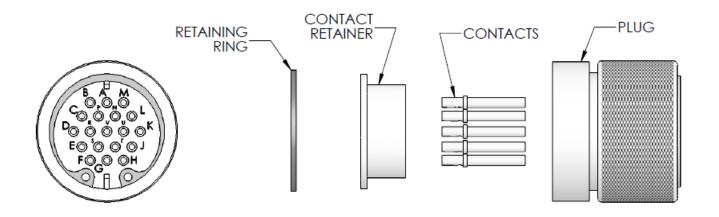

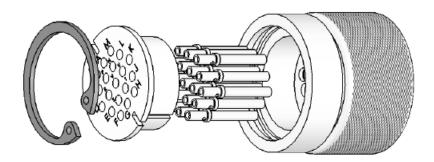

VQQ	tec
vacuum technology	& components

MIL-C-26482 connector instruction

Not scale drawing

Sheet 1 of 2

Date:	10/02/2011
Revision:	0.0
Dimensions:	IN (mm)
Number:	

Property and confidential

The information contained in this drawing is the sole property of Vaqtec Srl. Any reproduction in part or as a whole without the written permission of Vaqtec Srl is prohibited.